


RIM THICKNESS MEASUREMENT

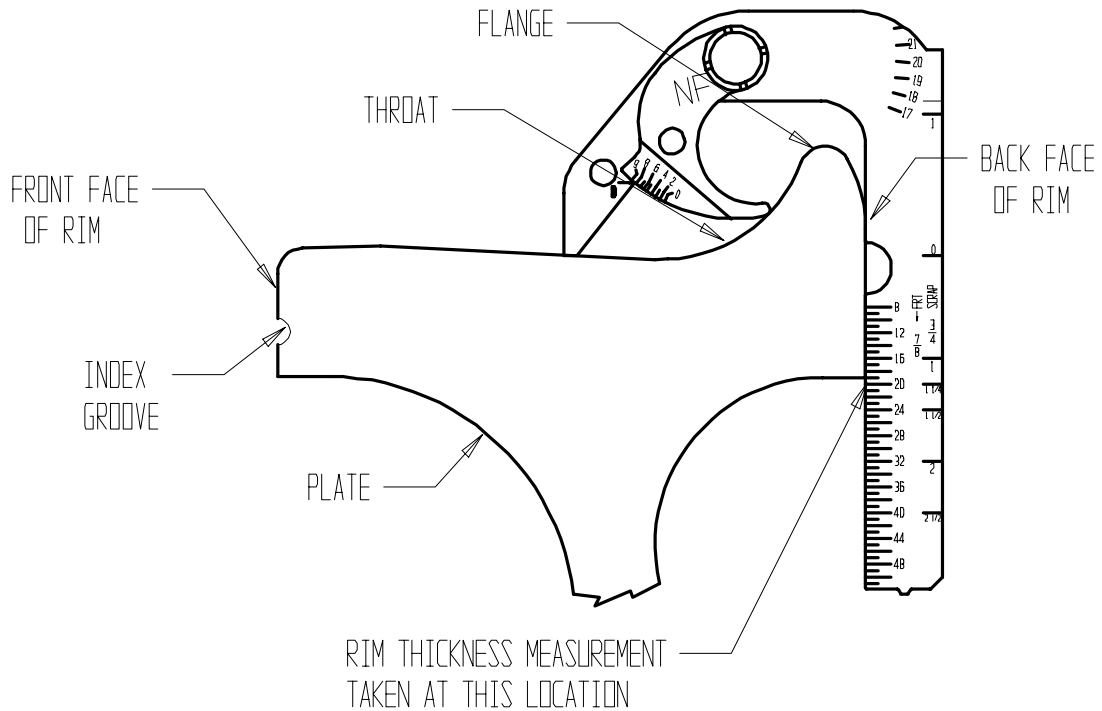

PLACE WHEEL GAGE ON BACK FACE OF RIM WITH HOOK ON THE TREAD OF THE WHEEL. ENSURE THAT GAGE IS FLUSH WITH THE BACK FACE OF THE RIM AND THE HOOK IS IN CONTACT WITH THE TREAD OF THE WHEEL. TAKE READING ON THE WHEEL GAGE AT THE RULER SCALE AND THE EDGE AT THE BOTTOM OF THE BACK FACE OF THE WHEEL.