


# MEASURING FLANGE HEIGHT

## W601 & W600

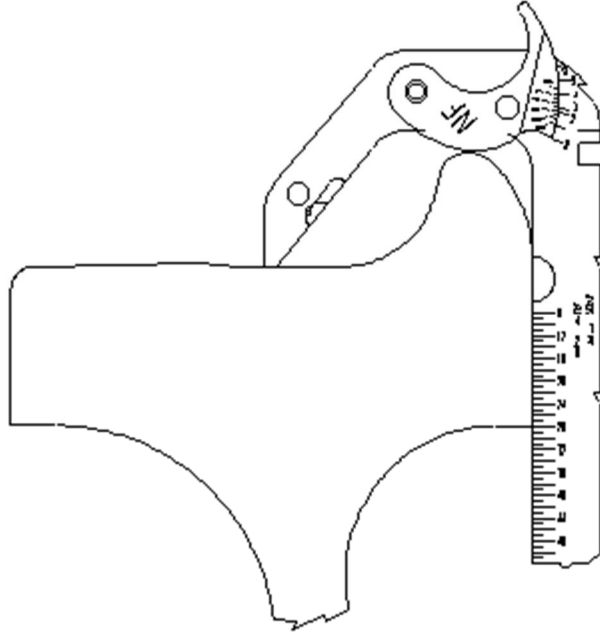

## FLANGE HEIGHT

<b>STD</b>	<b>DECIMAL</b>	<b>1/16</b>	<b>1/16 (ROUNDED)</b>
<b>0 on 0</b>	<b>1.047</b>	<b>16.752</b>	<b>17</b>
<b>0 on 1</b>	<b>1.109</b>	<b>17.744</b>	<b>18</b>
<b>0 on 2</b>	<b>1.172</b>	<b>18.752</b>	<b>19</b>
<b>0 on 3</b>	<b>1.1875</b>	<b>19</b>	<b>19</b>
<b>0 on 4</b>	<b>1.250</b>	<b>20</b>	<b>20</b>
<b>0 on 5</b>	<b>1.3125</b>	<b>21</b>	<b>21</b>
<b>0 on 6</b>	<b>1.375</b>	<b>22</b>	<b>22</b>
<b>2 on 6</b>	<b>1.3968</b>	<b>22.3488</b>	<b>22</b>
<b>4 on 6</b>	<b>1.432</b>	<b>22.912</b>	<b>23</b>
<b>6 on 6</b>	<b>1.46293</b>	<b>23.40688</b>	<b>23</b>