


VERIFFYING W620-1P & W620-2P USING MASTER GAGE W785A

VERIFY
ALIGNMENT

THIS KNOTCH NOT
USED TO VERIFY SCALE

TIP MUST TOUCH
BOTTOM OF NOTCH

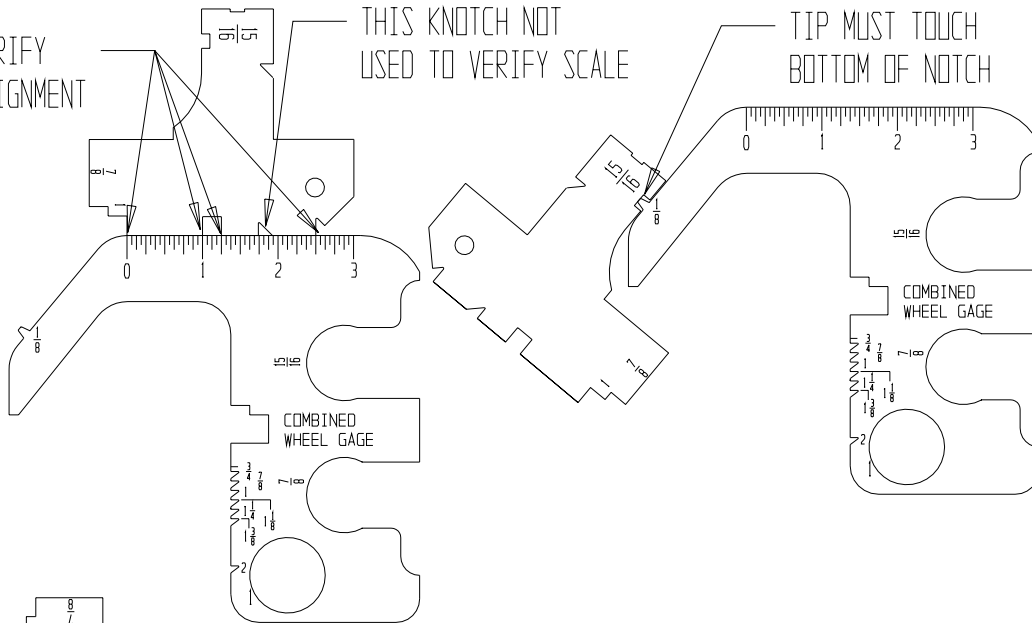


MUST ALIGN

MUST SEAT

VERIFY
ALIGNMENT

NO GO
1 INCH STEP

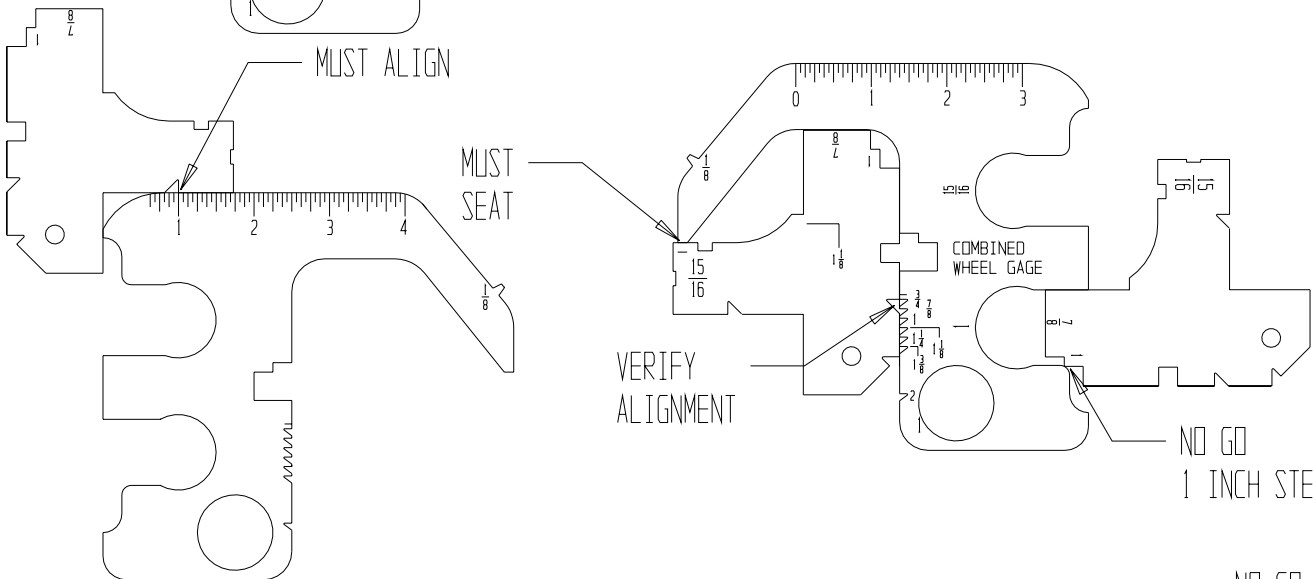

NO-GO

NO-GO

