


## WHEEL DIAMETER MEASUREMENT

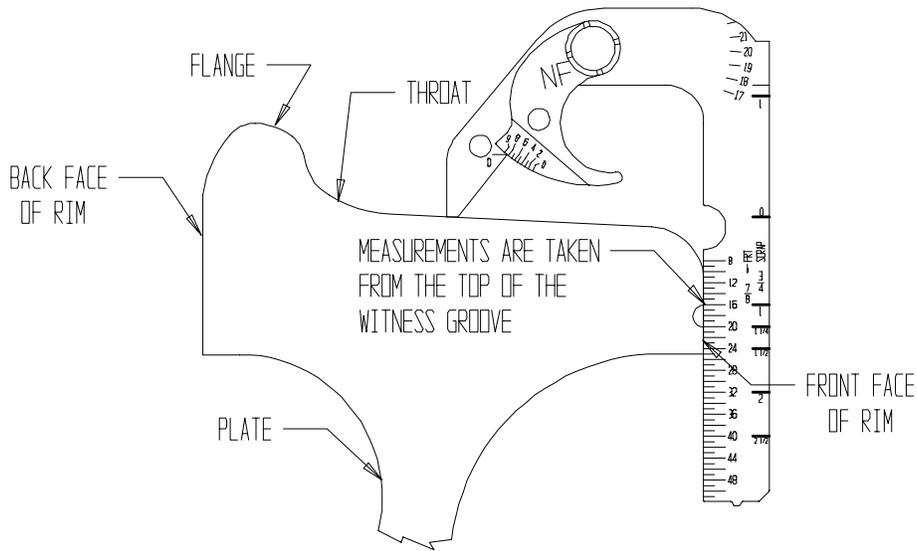

40" DIAMETER WHEELS (WITNESS GROOVE =36")  
 42" DIAMETER WHEELS (WITNESS GROOVE =38")  
 45" DIAMETER WHEELS (WITNESS GROOVE =40")

**PLACE WHEEL GAGE ON THE FRONT FACE OF RIM WITH HOOK ON THE TREAD OF THE WHEEL, ENSURE THAT GAGE IS FLUSH WITH THE FRONT FACE OF THE RIM AND THE HOOK IS IN CONTACT WITH THE TREAD OF THE WHEEL, TAKE READING ON THE RULER SCALE AND AT THE TOP OF THE WITNESS GROOVE.**

### CONVERSION CHART FOR WHEEL DIAMETER

MEAS	36 WG	38 WG	40 WG	MEAS	36 WG	38 WG	40 WG	MEAS	36 WG	38 WG	40 WG	MEAS	36 WG	38 WG	40 WG	MEAS	36 WG	38 WG	40 WG
8	37	39	41	18	38 1/4	40 1/4	42 1/4	28	39 1/2	41 1/2	43 1/2	38	40 3/4	42 3/4	44 3/4	48	46	58	47 1/4
9	37 1/8	39 1/8	41 1/8	19	38 3/8	40 3/8	42 3/8	29	39 5/8	41 5/8	43 5/8	39	40 7/8	42 7/8	44 7/8	49	46 1/8	59	47 3/8
10	37 1/4	39 1/4	41 1/4	20	38 1/2	40 1/2	42 1/2	30	39 3/4	41 3/4	43 3/4	40	41	43	45	50	46 1/4	60	47 1/2
11	37 3/8	39 3/8	41 3/8	21	38 5/8	40 5/8	42 5/8	31	39 7/8	41 7/8	43 7/8	41	41 1/8	43 1/8	45 1/8	51	46 3/8	61	47 5/8
12	37 1/2	39 1/2	41 1/2	22	38 3/4	40 3/4	42 3/4	32	40	42	44	42	41 1/4	43 1/4	45 1/4	52	46 1/2	62	47 3/4
13	37 5/8	39 5/8	41 5/8	23	38 7/8	40 7/8	42 7/8	33	40 1/8	42 1/8	44 1/8	43	41 3/8	43 3/8	45 3/8	53	46 5/8	63	47 7/8
14	37 3/4	39 3/4	41 3/4	24	39	41	43	34	40 1/4	42 1/4	44 1/4	44	41 1/2	43 1/2	45 1/2	54	46 3/4	64	48
15	37 7/8	39 7/8	41 7/8	25	39 1/8	41 1/8	43 1/8	35	40 3/8	42 3/8	44 3/8	45	41 5/8	43 5/8	45 5/8	55	46 7/8	65	48 1/8
16	38	40	42	26	39 1/4	41 1/4	43 1/4	36	40 1/2	42 1/2	44 1/2	46	41 3/4	43 3/4	45 3/4	56	47	66	48 1/4
17	38 1/8	40 1/8	42 1/8	27	39 3/8	41 3/8	43 3/8	37	40 5/8	42 5/8	44 5/8	47	41 7/8	43 7/8	45 7/8	57	47 1/8	67	48 3/8